

SHURE

HIGH FIDELITY AUDIO PRODUCTS

222 HARTREY AVE., EVANSTON, IL, 60024 U.S.A.

ARFA CODE 312/466 2200 • CABLE: SHUREMICH0

1WX: 910 231 0048 • TEL: 72 438*

MODEL LTP-2

SPECIFICATIONS

Stylus: 10 x 18 μ (.0004 x .0007 in.), biradial elliptical diamond tip. Tan grip.

Frequency Response: 20 to 20,000 Hz

Output Voltage (at 1,000 Hz, 5 cm/sec peak velocity): 4.0 mV per channel

Channel Balance: Within 2 dB

Channel Separation (minimum): 20 dB at 1,000 Hz

Optimum Load: 47,000 ohms resistance in parallel with 200 to 300 picofarads total capacitance per channel. Load resistance can be up to 70,000 ohms with almost no audible change in frequency response. Total capacitance includes both tone arm wiring and amplifier input circuit.

Inductance: 700 millihenries

DC Resistance: 1550 ohms

Tracking Force: 1.25 grams optimum; 1.5 grams maximum

Net weight: 6 grams

Upgrade Replacement Stylus: N94LT with 10 x 18 μ (.0004 x .0007 in.), biradial elliptical diamond tip. Dark Blue grip.

STYLUS CLEANING

Use a soft brush with an alcohol-distilled water solution or Shure Stylus Cleaning Solution. (See your dealer and ask for the Shure SK-1, Stylus Cleaning Kit.) Brush only from back to front as shown in Figure 1. Other commercial cleaning solutions may cause stylus damage.


STYLUS REPLACEMENT

Place the Technics Linear Tracking arm in a convenient position as follows.

1. With the lid closed, use the "manual" mode to move the arm to approximately the center of its travel.
2. Make certain the cartridge is cued "up" (raised off the record), and press the Off-On switch "Off."
3. Raise the lid.

Replace the stylus as shown in Figure 2. Always hold the stylus only by the plastic grip, take care not to touch or damage the shank or diamond tip.

Copyright 1982, Shure Brothers Inc.
27A1838 (BH)

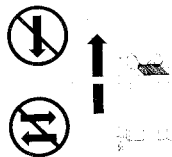

STYLUS CLEANING
FIGURE 1



STYLUS REPLACEMENT
FIGURE 2

Printed in U.S.A.

SPECIAL NOTE

To maintain the original performance standards of your cartridge, be certain that any replacement stylus you buy bears the following certification on the package: "This Stereo DYNETIC® stylus is precision manufactured by Shure Brothers Inc." AVOID INFERIOR IMITATIONS. THEY WILL SERIOUSLY DEGRADE THE PERFORMANCE OF YOUR CARTRIDGE. ALL GENUINE "DYNETIC®" STYLIS ARE MANUFACTURED BY SHURE BROTHERS INC. LOOK FOR THE NAME SHURE ON THE STYLUS GRIP.

FULL ONE-YEAR WARRANTY

Shure Brothers Incorporated ("Shure"), 222 Hartrey Avenue, Evanston, Illinois 60204, warrants to the owner of this product that it will be free, in normal use, of any defects in workmanship and materials for a period of one year from date of purchase. You should retain proof of date of purchase. Shure is not liable for any consequential damages. If this Shure product has any defects as described above, carefully repack the unit and return it prepaid to: Shure Brothers Incorporated Attention: Service Department 1501 West Shure Drive Arlington Heights, Illinois 60004. If you are not in the United States, return the unit to your dealer or Authorized Service Center for repair. The unit will be repaired or replaced and returned to you promptly, and if it cannot be repaired or replaced, you may elect to receive a refund. This warranty does not include stylus wear.

PATENT NOTICE: All Shure Stylis and Cartridges are manufactured under one or more of the following U.S. Patents: 3,055,988; 3,077,521; 3,077,522; 3,463,889; 4,270,758; 4,194,744; 4,275,888; D193,854; D193,934; D201,803; D235,070; D235,351; D235,352; D245,022; D245,433; D252,628; D254,004; D257,676; D255,898; D258,586; other patents pending.

RECOMMANDATIONS POUR LE NETTOYAGE DE LA POINTE: Utilisez une brosse douce, humectée d'alcool pur ou dilué. Les liquides de nettoyage vendus dans le commerce peuvent endommager ou corroder la pointe. Brossez toujours d'arrière en avant.

REMPLACEMENT DU DIAMANT: Placer le bras de la platine Technics dans la position adéquate. Opérer comme suit:

1. Le capot étant fermé, utiliser le mode "manuel" pour placer le bras approximativement à mi-course.
2. S'assurer que le bras est en position "up" (cellule non en contact avec le disque), et mettre le contacteur d'alimentation de la platine sur "off".
3. Soulever le capot.

Remplacer le diamant comme la figure. Tenir le diamant par le plastique, prendre garde à ne pas toucher ou endommager le diamant ou le tube porte pointe.

REMARQUE: Assurez-vous que tout diamant de remplacement que vous achetez porte la garantie suivante sur son emballage: "This Stereo Dynetic® Stylus is precision manufactured by Shure Brothers Inc." EVITEZ LES IMITATIONS DE QUALITE INFERIEURE. ELLES DETRUIRONT LE RENDEMENT DE VOTRE CELLULE. CHERCHEZ LE NOM DE SHURE SUR LE SUPPORT DE POINTE EN PLASTIQUE.

GARANTIE TOTALE D'UN AN: Shure Brothers Incorporated ("Shure"), 222 Hartrey Avenue, Evanston, Illinois 60204, garantit ce produit à son propriétaire, en utilisation normale, contre tous défauts de fabrication ou de matériaux, pendant une période d'un an à partir de la date d'achat. Conservez votre preuve d'achat. Shure n'est responsable d'aucuns dommages indirects. Si ce produit Shure présente un défaut comme précisé ci-dessus, remballiez-le soigneusement et renvoyez-le en port payé à: **Shure Brothers Incorporated, Attention: Service Department, 1501 West Shure Drive, Arlington Heights, Illinois 60004.** Si vous n'êtes pas aux U.S.A., renvoyez-le à votre revendeur ou au représentant officiel Shure, pour réparation. Ce produit sera réparé ou remplacé rapidement. S'il ne peut être réparé ou remplacé, vous pouvez opter pour un remboursement. Cette garantie ne couvre pas l'usure des pointes de lecture.